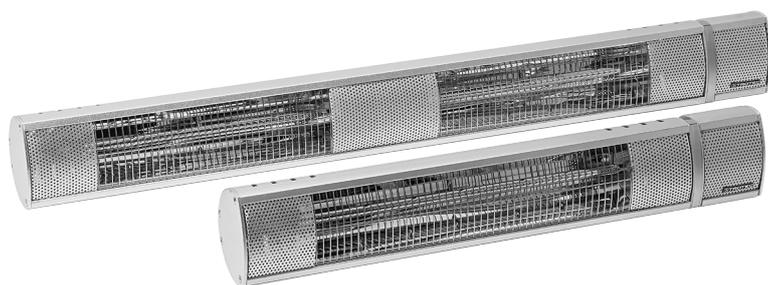


# IR 2050 / IR 3050

**EN**

**INSTRUCTIONS**  
RADIANT HEATER



**Table of contents**

**Information on the use of these instructions** ..... 2

**Safety** ..... 2

**Information about the device**..... 5

**Transport and storage**..... 6

**Assembly and start-up** ..... 7

**Operation** ..... 10

**Available accessories**..... 11

**Errors and faults**..... 12

**Maintenance** ..... 12

**Technical annex**..... 13

**Disposal** ..... 14

You can download the current version of these instructions via the following link:



IR 2050



<https://hub.trotec.com/?id=41230>

IR 3050



<https://hub.trotec.com/?id=43688>

**Information on the use of these instructions**

**Symbols**

-  **Warning**  
This signal word indicates a hazard with an average risk level which, if not avoided, can result in serious injury or death.
-  **Warning**  
This symbol indicates a fire hazard.
-  **Warning of electrical voltage**  
This symbol indicates dangers to the life and health of persons due to electrical voltage.
-  **Warning of hot surface**  
This symbol indicates dangers to the life and health of persons due to hot surface.
- Notice**  
This signal word indicates important information (e.g. material damage), but does not indicate hazards.
-  **Info**  
Information marked with this symbol helps you to carry out your tasks quickly and safely.
-  **Follow the manual**  
Information marked with this symbol indicates that the instructions must be observed.

**Safety**

**Read this manual carefully before starting or using the device. Always store the manual in the immediate vicinity of the device or its site of use.**

-  **Warning**  
**Read all safety warnings and all instructions.** Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury. **Save all warnings and instructions for future reference.**  
This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.  
Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children without supervision.



### Warning

Children of less than 3 years should be kept away from the device unless continuously supervised.

Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.



### Warning

Do not use the device in small rooms if persons are present who cannot leave the room independently and who are not under constant supervision.

- Do not use the device in potentially explosive rooms or areas and do not install it there.
  - Do not use the device in an aggressive atmosphere.
  - Let the device dry out after a wet clean. Do not operate it when wet.
  - Do not use the device with wet or damp hands.
  - Do not expose the device to directly squirting water.
  - Never insert any objects or limbs into the device.
  - Do not use the device as source of ignition.
  - Do not cover the device during operation.
  - This appliance is not a toy. Keep away from children and animals.
  - Check accessories and connection parts for possible damage prior to every use of the device. Do not use any defective devices or device parts.
  - Ensure that all electric cables outside of the device are protected from damage (e.g. caused by animals). Never use the device if electric cables or the power connection are damaged!
  - The mains connection must correspond to the specifications in the Technical annex.
  - Insert the mains plug into a properly fused mains socket.
  - Observe the device's power input, cable length and intended use when selecting extensions to the power cable. Completely unroll extension cables. Avoid electrical overload.
  - Before carrying out maintenance, care or repair work on the device, remove the mains plug from the mains socket. Hold onto the mains plug while doing so.
  - Switch the device off and disconnect the power cable from the mains socket when the device is not in use.
- Check the power cable and mains plug for damage. If you notice damages, do not try to take the device back into operation. Order a new power cable with mains plug from the manufacturer and replace the defective power cable with mains plug with the new one. Defective power cables pose a serious health risk!
  - When installing the device, observe the minimum distances from walls and other objects as well as the storage and operating conditions according to the technical data (chapter Technical annex).
  - Keep the safety distance specified in the technical data between the device's radiator side and all combustible materials such as textiles, curtains, beds and sofas, but at least 1 m.
  - Allow the device to cool down before transport and/or maintenance work.
  - The device must not be installed directly beneath a socket.
  - Do not use the device if it has been dropped or if it shows visible signs of damage.
  - Use the CR 2025 button battery type.
  - Do not insert a rechargeable battery into the remote control.
  - Never charge a battery that cannot be recharged.
  - Remove the discharged battery. Batteries contain materials hazardous to the environment. Dispose of the battery according to the national regulations.
  - Remove the battery from the remote control if you will not be using the device for a longer period of time.
  - Never short-circuit the terminal of the battery!
  - Do not swallow batteries! If a battery is swallowed, it can cause severe internal burns within 2 hours! These burns can lead to death!
  - If you think batteries might have been swallowed or otherwise entered the body, seek medical attention immediately!
  - Keep new and used batteries and an open battery compartment away from children.
  - If the battery compartment does not close securely, stop using the product via the remote control.

**Intended use**

Use the device IR 2050 / IR 3050 for heating surfaces in roofed and non-roofed outdoor areas.

Intended use comprises:

- heating surfaces
  - in storage facilities,
  - in construction areas,
  - in containers,
  - in the catering trade,
  - at trade fairs and events,
  - in outdoor areas (e.g. terraces).

**Notice**

Please use a safety fuse (overcurrent protection device) or a type C circuit breaker.

Any use other than the intended use is regarded as misuse.

**Reasonably foreseeable misuse**

- The device is not intended for industrial use.
- Do not place any objects, e.g. clothing, on the device.
- Do not use the device for heating in vehicles.
- Do not use this device in the vicinity of fuel, solvents, varnishes or other easily inflammable vapours or in rooms where these substances are stored.
- The device may not be used as a heating device for babies / children or animals.
- Never immerse the device in water.
- The device must not be mounted to the ceiling.
- This radiator must be set up in a way that the switches and controllers cannot be touched by a person in a bathtub, pool or shower.
- Do not make any unauthorised modifications, alterations or structural changes to the device.

**Personnel qualification**

People who use this device must:

- have basic knowledge of how to safely handle electrical equipment.
- have read and understood the instructions, especially the Safety chapter.

Maintenance tasks which require the housing to be opened must only be carried out by specialist electrical companies or by the manufacturer.

**Symbols on the device**

Symbols	Meaning
	This symbol located on the device indicates that it is prohibited to place objects (e.g. towels, clothes, etc.) above or directly in front of the device. In order to avoid overheating and fire hazards, the appliance must not be covered!

**Residual risks**



**Warning of electrical voltage**

Work on the electrical components must only be carried out by an authorised specialist company!



**Warning of electrical voltage**

Before any work on the device, remove the mains plug from the mains socket!

Do not touch the mains plug with wet or damp hands. Hold onto the mains plug while pulling the power cable out of the mains socket.



**Warning of hot surface**

Parts of this appliance can become very hot and cause burns. Particular attention is to be paid when there are children or vulnerable persons present!



**Warning**

Dangers can occur at the device when it is used by untrained people in an unprofessional or improper way! Observe the personnel qualifications!



**Warning**

Improper installation entails a risk of fire. Do not place the device on combustible ground. Do not place the device on high-pile carpets.



**Warning**

Risk of injury due to infrared radiation! Do not stay in the device's immediate vicinity for too long. Do not look directly into the device for too long. Observe the minimum distances.



**Warning**

There is a risk of fire by covering the device. Ensure that the device is standing freely at all times and that it is not covered.



**Warning**

Coarse dirt particles on the heating rods can cause the device to overheat. Fire hazard. Remove coarse dirt particles from the heating rods according to the Maintenance chapter before switching on the device.

## Behaviour in the event of an emergency

1. Switch the device off.
2. Disconnect the device from the mains by removing the mains plug from the socket. When doing so, be sure to hold the plug, not the cable.
3. Do not reconnect a defective device to the mains.

## Information about the device

### Device description

The device IR 2050 / IR 3050 is used to quickly generate instant heat.

The device is based on the functional principle of heat generation by infrared radiation. Persons or objects are heated directly.


The three heating levels can be set by remote control and on the device if required.

The device indicates operation by means of two-coloured LEDs.

- suitable for outdoor use
- IP65 type of protection – water-jet-proof professional device, dustproof and rainproof from all directions
- The IR 2050 comes equipped with a high-quality low-glare short-wave infrared tube offering more heat, lower brightness and a long service life.
- The IR 3050 comes equipped with two high-quality low-glare short-wave infrared tubes offering more heat, lower brightness and a long service life.
- approx. 6,000 operating hours with a light reduction of 80 %
- only suitable for wall mounting
- adjustable angle
- no dust circulation (suitable for allergy sufferers)


## Device depiction

### IR 2050

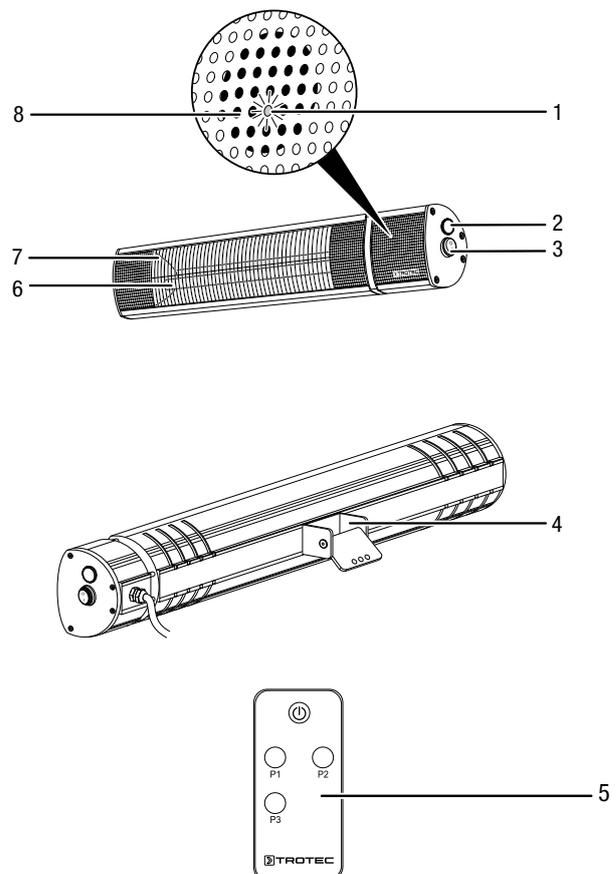

No.	Designation
1	Operating light (behind grille)
2	Power/Standby button
3	Power switch
4	Wall holder with adjustable inclination angle
5	Remote control
6	Heating rod
7	Grille
8	Infrared receiver for remote control

**IR 3050**

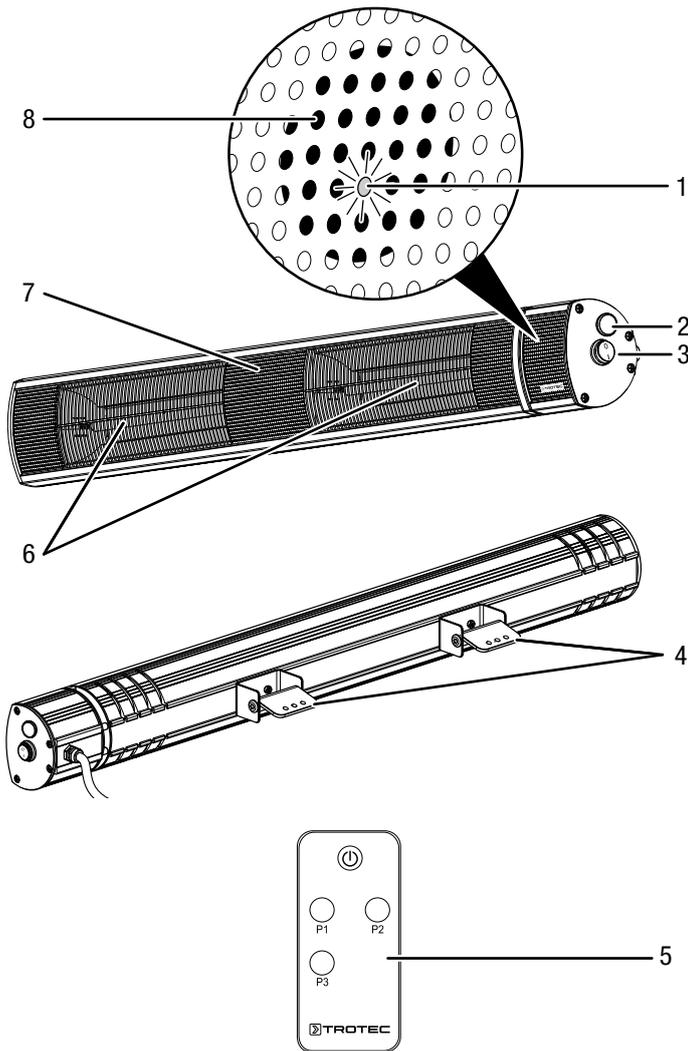

No.	Designation
1	Operating light (behind grille)
2	Power/Standby button
3	On/off switch
4	Wall holder with adjustable inclination angle
5	Remote control
6	Heating rod
7	Grille
8	Infrared receiver for remote control

**Transport and storage**

**Notice**

If you store or transport the device improperly, the device may be damaged.  
 Note the information regarding transport and storage of the device.

**Transport**

**Before** transporting the device, observe the following:

- Switch off the device by pressing the Power/standby button on the device (2) or on the remote control (10). Then set the on/off switch (3) on the device to **0**. The operating light (1) flashes red.
- Disconnect the device from the mains by removing the mains plug from the socket. When doing so, be sure to hold the plug, not the cable.
- Do not use the power cable to drag the device.
- Allow the device to cool down sufficiently.

**Storage**

**Before** storing the device, observe the following:

- Disconnect the device from the mains by removing the mains plug from the socket. When doing so, be sure to hold the plug, not the cable.
- Allow the device to cool down sufficiently.

When the device is not being used, observe the following storage conditions:

- Store the device in a dry location and protected from frost and heat.
- Store the device in an upright position where it is protected from dust and direct sunlight.
- If required, use a cover to protect the device from invasive dust.
- Place no further devices or objects on top of the device to prevent it from being damaged.
- Remove the battery from the remote control.

## Assembly and start-up

### Scope of delivery

#### IR 2050

- 1 x Device
- 1 x Mounting bracket
- 2 x Wing nut
- 3 x Screw
- 2 x Fastening screw
- 3 x Wall plug
- 1 x SW 5 Allen wrench
- 1 x Remote control (without battery)
- 1 x Manual

#### IR 3050

- 1 x Device
- 2 x Mounting bracket
- 4 x Wing nut
- 6 x Screw
- 4 x Fastening screw
- 6 x Wall plug
- 1 x SW 5 Allen wrench
- 1 x Remote control (without battery)
- 1 x Manual


### Unpacking the device



#### Warning

There is a danger of suffocation for children due to packaging material! Keep packaging films and parts away from children. There is a risk of death due to suffocation.

1. Open the cardboard box and take the device out.
2. Completely remove the packaging.
3. Remove the transport protection from the grille (7) of the radiant heater.

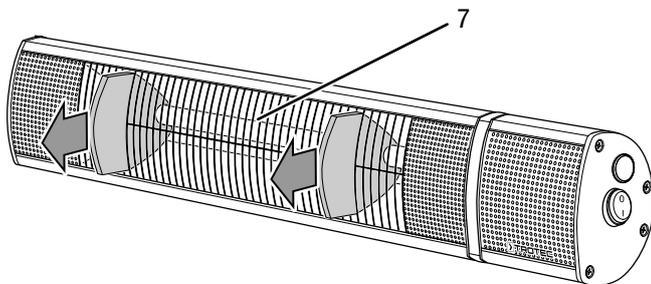

4. Fully unwind the power cable. Make sure that the power cable is not damaged and that you do not damage it during unwinding.

### Assembly



#### Warning of electrical voltage

Risk of injury due to incorrect assembly!  
Local or national regulations may apply for installation. We recommend to have the installation carried out by a qualified electrician.



#### Warning


Risk of fire due to improper installation!  
There is a risk of fire if the required minimum distances are not observed. Observe the "Installation" section in the "Assembly and start-up" chapter and the technical data in the "Technical annex" chapter.

The device is only suited for wall mounting. Observe the following requirement for installation inside a room:

### Installation

When installing the device, observe the minimum distances from walls and other objects as described in the Technical data chapter.

- Minimum distance of 180 cm from the floor.
- Minimum distance of 50 cm from adjacent walls or other objects.
- Do not install the device at the ceiling or directly behind a door.
- Never install the device in a way that it radiates directly onto walls or other objects. Observe the minimum distances from walls or other objects according to the Technical data chapter.
- Only install the device in a horizontal position.

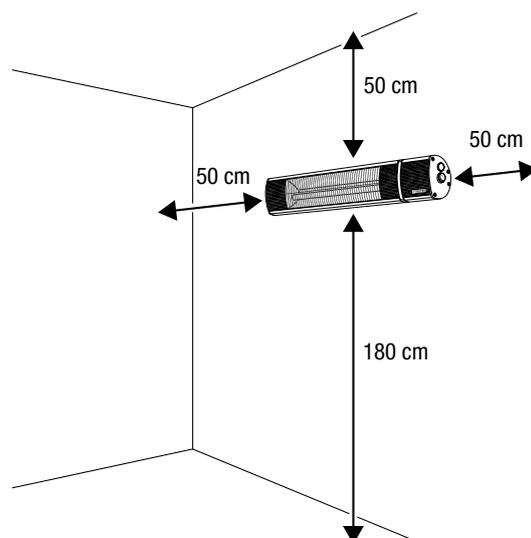


The following is required for installation:


- a pencil for marking the drill holes
- a suitable drill
- wall plugs appropriate for the structure of the wall
- a screwdriver
- a spirit level

**IR 2050**


1. Mark the drill holes on the wall.

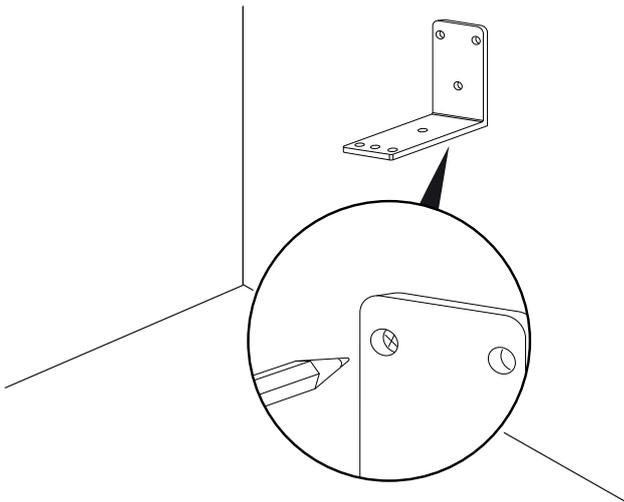

2. Drill the holes into the wall at the marked positions.
3. Insert suitable wall plugs into the drill holes.
4. Screw the mounting bracket to the wall.
5. Check the mounting bracket for tight fit.
6. Screw the device onto the mounting bracket. To do so, fasten the wall holder to the mounting bracket using the fastening screws and wing nuts.
7. Make sure that the device is attached securely.

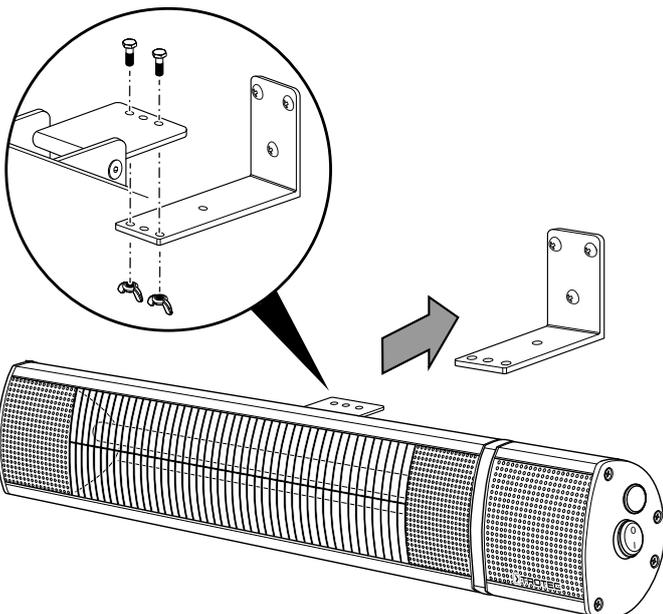


8. Tilt the device to the desired angle. The device can be tilted upwards and downwards by 90°. Use the Allen wrench to fix the inclination angle.

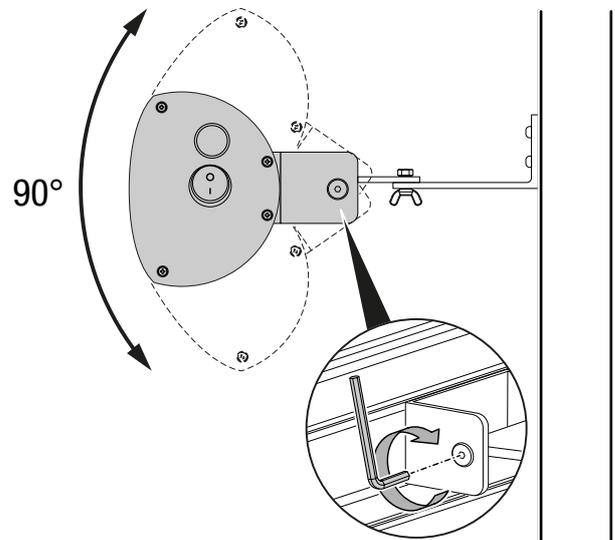


**IR 3050**

1. Mark the drill holes on the wall.

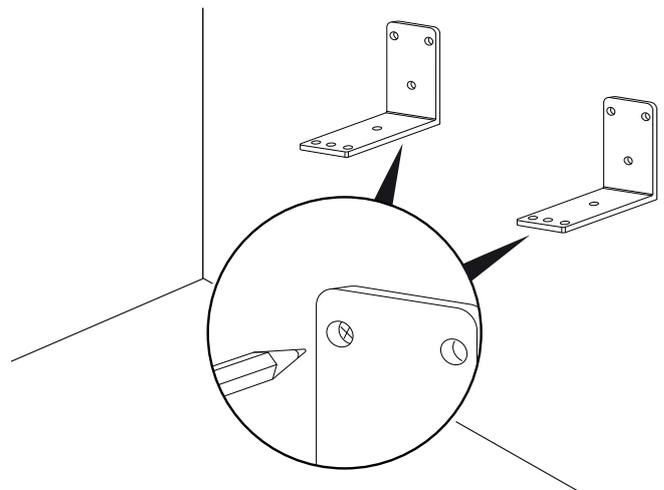


2. Drill the holes into the wall at the marked positions.
3. Insert suitable wall plugs into the drill holes.
4. Screw the mounting brackets to the wall.
5. Check the mounting brackets for tight fit.
6. Screw the device onto the mounting brackets. To do so, fasten the wall holders to the mounting brackets using the fastening screws and wing nuts.

7. Make sure that the device is attached securely.

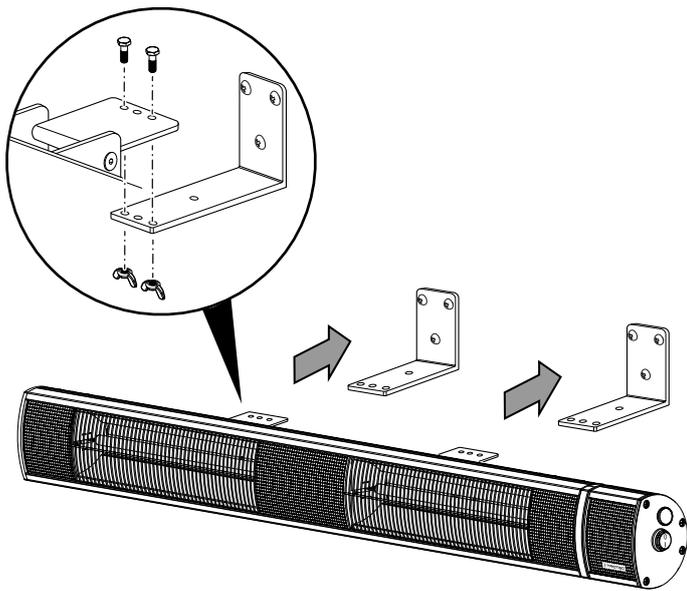

8. Tilt the device to the desired angle. The device can be tilted upwards and downwards by 60°. Use the Allen wrench to fix the inclination angle.

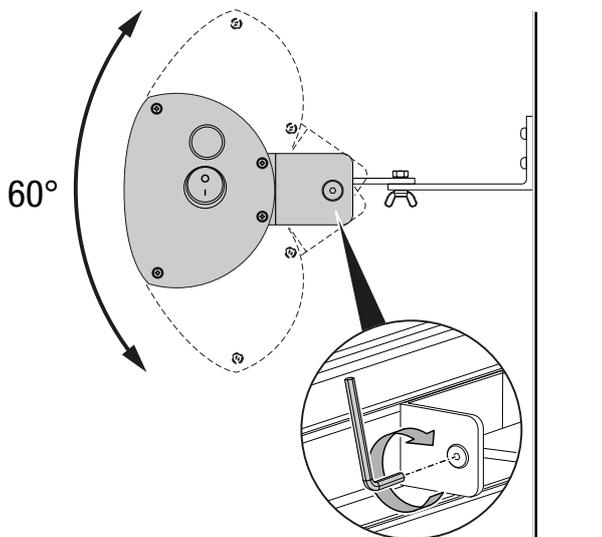

## Start-up



### Info

Odours may occur upon initial start-up or after a longer period of non-use.

### Notice

Please use a safety fuse (overcurrent protection device) or a type C circuit breaker.

### Notice

Current peaks in the millisecond range may occur temporarily during switch-on of the device. With an output of up to 3,000 watts, this may cause category 16A-B circuit breakers to trigger and to become defective in the long run.

If necessary, have the fuses replaced by a specialist electrical company.

- Before starting the device, check the condition of the power cable. If there are doubts as to their sound condition, contact the customer service.
- Do not create tripping hazards when laying the power cable or other electric cables, especially when positioning the device in the middle of the room. Use cable bridges.
- Make sure that extension cables are completely unrolled.
- Make sure that there are no curtains or similar objects in the immediate vicinity.

## Inserting batteries into the remote control

### Notice

Do not use rechargeable batteries!

1. Press the locking at the side of the battery compartment together and pull the battery compartment out of the remote control.
2. Insert a type CR 2025 battery into the battery compartment and slide the battery compartment back into the remote control.
  - ⇒ Make sure to insert the batteries into the battery compartment according to the correct polarity.

## Connecting the power cable

- Connect the mains plug to a properly secured socket.
- Route the power cable behind the device. Make sure that the power cable is never routed in front of the device!

**Operation**



**Warning**

Always remove the transport protection made of plastic foam completely from the device before taking the device into operation. Otherwise there is a risk of fire! Observe the Assembly and installation chapter.



**Info**

If you switch off the device via the Power/Standby button on the device (2) or on the remote control (10), the device will be set to standby mode. If standby operation is not required, you can switch the device off via the on/off switch (3).

**Notice**

Use the enclosed remote control to operate the device. The device can also be operated using the Power/standby button on the device (2). Please note that this procedure is only intended for use if the remote control is no longer available or is defective.


**Notice**

Keep the remote control in a safe place. If the remote control is no longer available or is defective, you can order a replacement from the manufacturer.

**Switching the device on**

Once you have prepared the device for operation as described in the chapter Connection and start-up, you can switch it on.

**IR 2050**

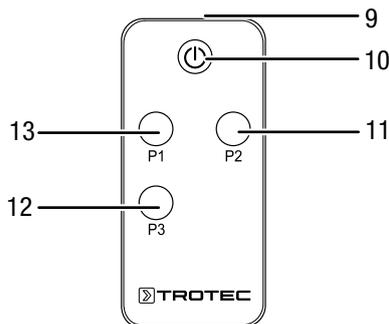


No.	Designation	Meaning
9	Transmitter	Sends signals to the device
10	Power/Standby button	Switching the device on and off
11	P2 button	To select heating capacity level 2 (1500 W)
12	P3 button	To select heating capacity level 3 (2000 W)
13	P1 button	To select heating capacity level 1 (750 W)

**IR 3050**

**Notice**

Initially, always start the device at level 1. Subsequently, you can switch over to level 2 or 3, if required.

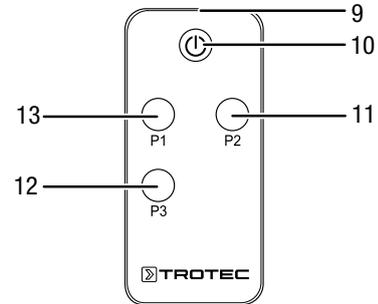

No.	Designation	Meaning
9	Transmitter	Sends signals to the device
10	Power/Standby button	Switching the device on and off
11	P2 button	To select heating capacity level 2 (2000 W)
12	P3 button	To select heating capacity level 3 (3000 W)
13	P1 button	To select heating capacity level 1 (1000 W)

**Setting the heating level with remote control**

- Set the on/off switch (3) on the device to I.
  - ⇒ The operating light (1) flashes red.
  - ⇒ The device is now in standby mode.
- Press the Power/Standby button on the remote control (10).
  - ⇒ The operating light (1) is illuminated in green.
  - ⇒ The device is switched on, but does not heat yet.

**IR 2050**

- Press the corresponding button (11, 12, 13) to set the desired heating level.
  - ⇒ During operation the operating light (1) is permanently illuminated in green.
  - ⇒ The device heats.

**IR 3050**

- Press the P1 button (13) to switch the device on at level 1.
  - ⇒ During operation the operating light (1) is permanently illuminated in green.
  - ⇒ The device heats.
- To set a higher heating capacity press either the P2 button (11) or the P3 button (12).

### Setting the heating level on the device

If the remote control is not available, you can change the heating level on the device as follows:

1. Set the on/off switch (3) on the device to **I**.
  - ⇒ The operating light (1) flashes red.
  - ⇒ The device is now in standby mode.
2. Press the Power/Standby button on the device (2).
  - ⇒ The operating light (1) is illuminated in green.
  - ⇒ The device is switched on and heating at heating level 1.
3. Press the Power/Standby button on the device (2) again to select heating level 2.
4. Press the Power/Standby button on the device (2) again to select heating level 3.
5. Press the Power/Standby button on the device (2) again to select standby mode.

### Shutdown



#### Warning of electrical voltage

Do not touch the mains plug with wet or damp hands.



#### Info

If you switch off the device via the Power/Standby button on the device (2) or on the remote control (10), the device will be set to standby mode. If standby operation is not required, you can switch the device off via the on/off switch (3).

- Switch off the device by pressing the Power/standby button on the device (2) or on the remote control (10). Then set the on/off switch (3) on the device to **0**. The operating light flashes red.
- Allow the device to cool down completely.
- Disconnect the device from the mains by removing the mains plug from the socket. When doing so, be sure to hold the plug, not the cable.
- If required, clean the device according to the "Maintenance" chapter.
- Store the device according to the Transport and storage chapter.

### Available accessories



#### Warning

Only use accessories and additional equipment specified in the instructions. Using insertion tools or accessories other than those specified in the instructions may cause a risk of injury.

Designation	Article number
remote control IR 2050	7.140.000.575
remote control IR 3050	7.140.000.042

## Errors and faults



### Warning of electrical voltage

Tasks which require the device to be opened must only be carried out by authorised specialist companies or by the manufacturer.

The device has been checked for proper functioning several times during production. If malfunctions occur nonetheless, check the device according to the following list.

### The device does not start:

- Check the power connection.
- Check the power cable and mains plug for damage. If you notice damages, do not try to take the device back into operation. Order a new spare cable from the manufacturer and replace the defective power cable with the new one.
- Check the on-site fusing.
- If the device is not starting, have the electricians checked by a specialist company or by the manufacturer.

### The device does not emit heat:

- The heating element may be defective. If the heating element is defective, have it replaced by a specialist electrical company.
- Check the on/off switch. If the on/off switch is set to the **0** position, the device is switched off.  
Switch the device on.
- Check the operating light. If the operating light flashes red, the device is running in standby mode.  
Switch on the device by selecting a heating level.

### RCD or another fuse trips:

- Check the fuse. Switch off any other devices to reduce the load on the line.
- Contact a specialist electrical company.

### The device slightly vibrates during switch-on and then stops vibrating:

- Slight vibrations during switch-on are a normal process. No measures are required.

### The device does not respond to the infrared remote control:

- Check whether the distance between remote control and device is too large and reduce it if necessary.
- Make sure there are no obstacles, such as furniture or walls, between the device and the remote control. Ensure visual contact between device and remote control.
- If the batteries have just been changed, check them for correct polarity.
- Check the charging status of the battery and replace the battery, if necessary.

### The device still does not operate correctly after these checks:

Contact the manufacturer's customer service. If necessary, take the device to an authorised specialist electrical company or to the manufacturer for repair.

## Maintenance

### Activities required before starting maintenance



### Warning of electrical voltage

Do not touch the mains plug with wet or damp hands.

- Switch off the device by pressing the Power/standby button on the device (2) or on the remote control (10). Then set the on/off switch (3) on the device to **0**. The operating light flashes red.
- Disconnect the device from the mains by removing the mains plug from the socket. When doing so, be sure to hold the plug, not the cable.
- Allow the device to cool down completely.



### Warning of electrical voltage

Tasks which require the device to be opened must only be carried out by authorised specialist companies or by the manufacturer.

### Cleaning the device



### Warning of electrical voltage

Never immerse the device in water!



### Warning of hot surface

Do not touch the reflector or the heating rods with bare hands.

Clean the device with a soft, damp and lint-free cloth. Ensure that no moisture enters the housing. Protect electrical components from moisture. Do not use any aggressive cleaning agents such as cleaning sprays, solvents, alcohol-based or abrasive cleaners to dampen the cloth.

Wipe the housing dry after cleaning.

Dirt on the heating rods should be removed with a long brush with soft bristles.

**Technical annex**
**Technical data**

Parameter	Value	
Model	IR 2050	IR 3050
Heating capacity	750 / 1500 / 2000 W	1000 / 2000 / 3000 W
Mains connection	220–240 V ~ 50/60 Hz	220–240 V ~ 50/60 Hz
Plug type	CEE 7/7	CEE 7/7
Type of protection	IP65	IP65
Dimensions (depth x width x height)	165 x 630 x 105 mm	165 x 960 x 105 mm
Minimum distance to walls and other objects:	top: 50 cm bottom: 180 cm sides: 50 cm front: 50 cm	50 cm 180 cm 50 cm 50 cm
Remote control battery	1 x type CR 2025 / 3 V	1 x type CR 2025 / 3 V
Weight	2 kg	3 kg

## Disposal

Always dispose of packing materials in an environmentally friendly manner and in accordance with the applicable local disposal regulations.



The icon with the crossed-out wheeled bin indicates that this device and any associated components (e.g. remote controls) must not be disposed of with household waste at the end of their life, in accordance with the Waste Electrical and Electronic Equipment Directive (2012/19/EU) and national laws.

You will find collection points for free return of waste electrical and electronic equipment in your vicinity. The addresses can be obtained from your municipality or local administration. You can also find out about other return options that apply for many EU countries on the website <https://hub.trotec.com/?id=45090>. Otherwise, please contact an official recycling centre for electronic and electrical equipment authorised for your country.

The separate collection of waste electrical and electronic equipment aims to enable the re-use, recycling and other forms of recovery of waste equipment as well as to prevent negative effects for the environment and human health caused by the disposal of hazardous substances potentially contained in the equipment.



This icon with the crossed-out wheeled bin indicates that batteries or accumulators must not be disposed of with household waste at the end of their life. If the device contains batteries or accumulators that contain mercury, cadmium or lead, the respective chemical symbol (Hg, Cd or Pb) is shown below the icon of the crossed-out wheeled bin. To prevent environmental pollution, do not carelessly leave batteries or electrical and electronic equipment containing batteries in public areas. In the European Union, batteries and accumulators must be returned to a designated collection point in accordance with REGULATION (EU) 2023/1542 OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL of 12 July 2023 concerning batteries and waste batteries. Remove batteries/accumulators and dispose of them separately according to the relevant legal requirements.

## Only for United Kingdom

According to Waste Electrical and Electronic Equipment Regulations 2013 (SI 2013/3113) (as amended) and the Waste Batteries and Accumulators Regulations 2009 (SI 2009/890) (as amended), devices that are no longer usable must be collected separately and disposed of in an environmentally friendly manner.

Trotec GmbH

Grebener Str. 7  
52525 Heinsberg  
Germany

☎ +49 2452 962-0

☎ +49 2452 962-200

✉ [online@trotec.com](mailto:online@trotec.com)

[www.trotec.com](http://www.trotec.com)