

# Telescopic stand



**EN**


**OPERATING MANUAL**  
TELESCOPIC STAND

Read all the safety instructions carefully before use and keep this instruction manual for future reference.

### Safety warnings

- Caution: Some parts of this product can become very hot and cause burns. Particular attention must be given when children and vulnerable people are present.
- Do not use the product if there are any visible signs of damage.

### Scope of delivery

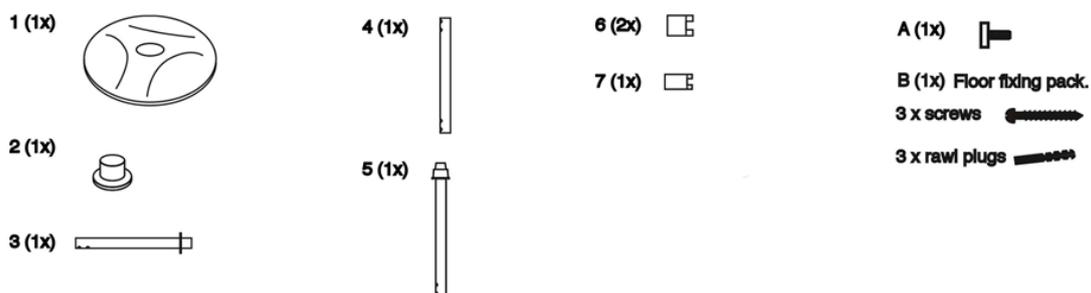


Prior to assembly: read the instructions carefully. Check all parts against the scope of delivery.

For ease of assembly only loosely tighten crews and then tighten fully when assembly is complete.

**WARNING! - DO NOT** over tighten the screws; only tighten with moderate pressure to avoid damaging the screws or components of the radiant heater.

## Assembly

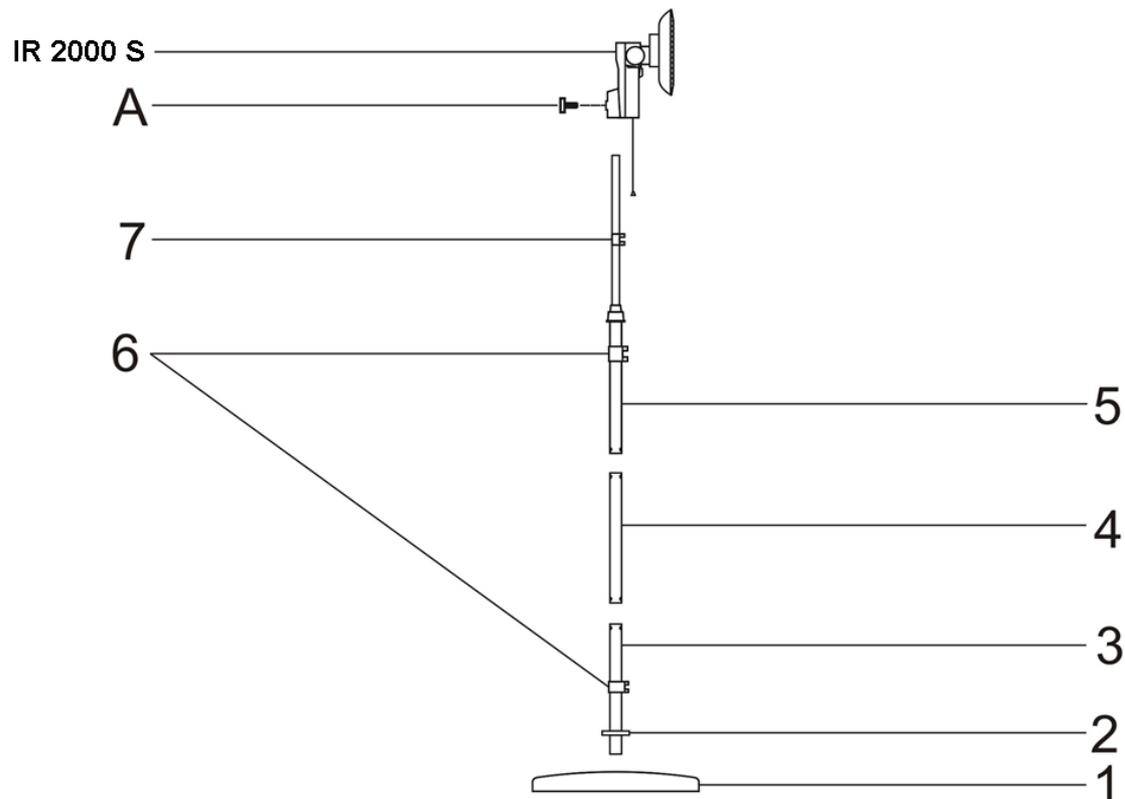

**IMPORTANT! – Remove any packaging before use. Retain safety instructions and store them with this product.**

**STEP 1** – Remove 4x pre-attached inner screws on the base (1) and connect base pole (3) to the base (1).

**STEP 2** – Slide the screw cover (2) over the base pole (3).

**STEP 3** – Remove the pre-attached screws on the base pole (3) and slide over one of the two cable clips (6). Secure using pre-attached screw.

**STEP 4** – Attach the middle pole (4) to the base pole (3) using 3x pre-attached screws.

**STEP 5** – Remove the pre-attached screws on the middle pole (4) and slide over the second cable clip (6). Secure using pre-attached screw.

**STEP 6** – Attach the top pole (5) to the middle pole (4) using the 3x pre-attached screws.

**STEP 7** – Slide the small cable clip (7) over the top pole (5). Secure with pre-attached screw.

**STEP 8** – Join radiant heater IR 2000 S to the extending top pole (5) using knob (A) and tighten it hand-tight.

**STEP 9** – Clip the cable into the 3x cable clips (6, 7).

To fix your product to the floor, remove the 8x screws from the base section (1), removing the assembled pole and separating the base cover.

Insert the 3x plugs from the floor fixing pack (B) into the ground and align the base section over the plugs.

Insert the 3x screws from floor fixing pack (B) and tighten them.

Place the cover over the base section and reassemble using 4x screws.

Use the 4x remaining screws to reattach the assembled pole to the base section (1).

### Technical data

Telescopic stand for IR 2000 S

Height (m) adjustable excl. radiant heater IR 2000 S:	1.3 m - 1.5 m
Weight:	6 kg

Always dispose of packing materials in an environmentally friendly manner and in accordance with the applicable local disposal regulations.



The icon with the crossed-out waste bin on waste electrical or electronic equipment is taken from Directive 2012/19/EU. It states that this device must not be disposed of with the household waste at the end of its life. You will find collection points for free return of waste electrical and electronic equipment in your vicinity. The addresses can be obtained from your municipality or local administration. You can also find out about other return options that apply for many EU countries on the website <https://hub.trotec.com/?id=45090>. Otherwise, please contact an official recycling centre for electronic and electrical equipment authorised for your country.

The separate collection of waste electrical and electronic equipment aims to enable the re-use, recycling and other forms of recovery of waste equipment as well as to prevent negative effects for the environment and human health caused by the disposal of hazardous substances potentially contained in the equipment.

### Only for United Kingdom

According to Waste Electrical and Electronic Equipment Regulations 2013 (SI 2013/3113) (as amended) devices that are no longer usable must be collected separately and disposed of in an environmentally friendly manner.



**Trotec GmbH**

Grebbener Str. 7  
D-52525 Heinsberg

☎ +49 2452 962-400

☎ +49 2452 962-200

✉ [info@trotec.com](mailto:info@trotec.com)

[www.trotec.com](http://www.trotec.com)